

5200 DMZ Setup Instructions



1. Click on 'Advance Setup'.

ADSL Modem/Router

Advanced	Quick Start	Interface Setup	Advanced Setup	Access Management	Maintenance	Status	Help
	Firewall	Routing	NAT	ADSL			

NAT

2. Click on 'NAT'.

Virtual Circuit :

NAT Status : Activated

Number of IPs : ☒ Single ☐ Multiple

☒ DMZ 3. Click on 'DMZ'.

☐ Virtual Server



ADSL Modem/Router

Advanced	Quick Start	Interface Setup	Advanced Setup	Access Management	Maintenance	Status	Help
	Firewall	Routing	NAT	ADSL			
DMZ							
	DMZ setting for : Single IP Account						
	DMZ : ☒ Enabled ☐ Disabled						
	DMZ Host IP Address : 192.168.1.100						
	SAVE BACK						

4. Click on the 'Enabled'.

5. Enter the host computer/device's IP address in the above box.

6. Click on the 'Save' button.